



Remark:  
 1. The WiFi status clearing button is KEY1.  
 2. The WiFi status indicator must be retained.  
 3. The switch indicator is realized by hardware. If you want to change the display mode, you can change it yourself.  
 4. It is recommended that the WiFi firmware flashing port be reserved for the early samples to facilitate the adjustment of the firmware.